

SOLO

100

SOLO

75

RAPID LOCK
Tripod Series

OPERATOR'S MANUAL

- #1630 - Solo 75 2-Stage Tripod (Alloy)
- #1501 - Solo 75 2-Stage Tripod
- #2001 - Solo 75 3-Stage Tripod
- #1505 - Solo 100 3-Stage Tripod



Features and Controls

75mm Bowl or 100mm Bowl

Leg Angle Adjuster

Leg Mounting Bolt

Shoulder Strap Mounting Point

Protective Leg Cover

Leg Lock Direction Label (also leg strap mounting point)


Upper Concentric RAPID LOCK

Middle Concentric RAPID LOCK

Lower Concentric RAPID LOCK

Screw Down Rubber Foot

Steel Spike

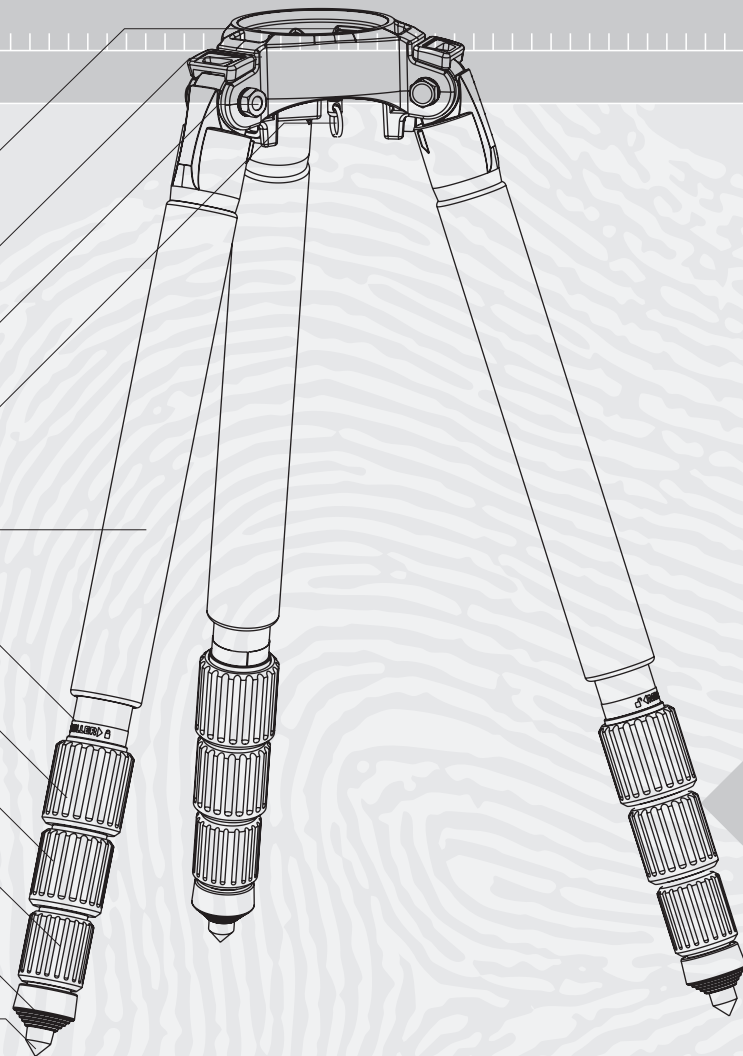

Introduction

Thank you for purchasing the Miller SOLO RAPID LOCK tripod.

SOLO RAPID LOCK is a professional tripod, compatible with industry standard 75 & 100 mm ball levelling pan & tilt heads. SOLO RAPID LOCK is designed to support DVCAM camcorders in location and studio production.

The quality of design, manufacture and finishing of the SOLO RAPID LOCK tripod has proven to deliver strength, lightweight, durability and versatility.

The Carbon Fibre/Basalt tubing provides optimum rigidity while the SOLO RAPID LOCK system and the centrally located Leg Angle Adjustors enable a fast, accurate and hassle free set-up of the tripod. Importantly, the high strength and stability of the SOLO RAPID LOCK tripod is maintained throughout its impressive operating height range, from a low 22 cm (8.7") up to an impressive 187 cm (73") (#1505 & #2001 SOLO RAPID LOCK tripod).

Technical Data

Cat#	1630	1501	2001	1505
Bowl Diameter	75mm	75mm	75mm	100mm
Tube Configuration	2 Stage telescopic	2 Stage telescopic	3 Stage telescopic	3 Stage telescopic
Lock Type	Concentric Rapid Lock	Concentric Rapid Lock	Concentric Rapid Lock	Concentric Rapid Lock
Tube Material	Alloy	Carbon fibre/Basalt	Carbon fibre/Basalt	Carbon fibre/Basalt
Payload Capacity kg (lb)	20 (44.1)	20 (44.1)	20 (44.1)	30 (66)
Weight kg (lb)	2.9 (6.4)	2.5 (5.5)	3.0 (6.6)	3.1 (6.8)
Max Height mm (in)	1625 (64)	1614 (63.5)	1870 (73.6)	1870 (73.6)
Min Height mm (in)	234 (9.2)	234 (9.2)	220 (8.7)	220 (8.7)
Transport Length mm (in)	700 (27.6)	694 (27.3)	658 (25.9)	658 (25.9)

Operation Manual

The operating instructions are described in five steps. Please read and understand these instructions before using this equipment. Do Not omit any steps.


This Operator's Manual contains important set-up, pull-down, adjustment, safety and maintenance information for the SOLO RAPID LOCK tripod. Please consult the Operator's Manual for the Fluid Head, Camera and/or Accessories to ensure compatibility and safety of the system.

Tripod Setup

Fig 1 Collapsed position



Fig 2 Spread position

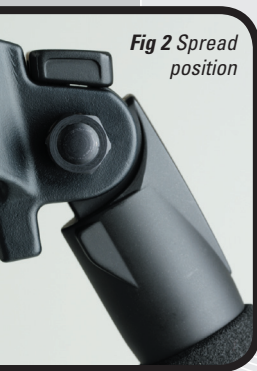

Remove tripod from carry bag, undo clip on leg strap and stand on a level surface (if possible). Depending on surface, screw out rubber foot for non-scratch contact to interior or hard surfaces or screw in for a spike on exterior soft surfaces such as dirt or sand.

Note: Leg angle adjusters are spring loaded and self adjusting. Do not hold leg angle adjuster up while spreading tripod legs as this may cause leg angle adjusters to operate improperly and potentially damage the tripod.

Maximum Height

(Leg angle adjustment is not required)

- 1 Separate legs slightly so they are parallel.
- 2 Working with each leg individually, grip concentric locks and release one turn (see leg lock direction label on leg).
- 3 Extend to desired length and turn each concentric lock to engage firmly. Repeat process for remaining legs.
- 4 Spread tripod legs (Fig. 2) and adjust leg length to ensure tripod bowl is approximately level.
- 5 Level the fluid head using bubble level and ball levelling feature of fluid head.



Fig 3 Leg angle adjuster raised



Minimum Height

Note: It is recommended that minimum height position is used only with legs at their shortest length.



- 1 Pull up leg angle adjuster until it locks into a raised position (Fig. 3). Repeat for all three locks.
- 2 Holding one leg on the ground pull the remaining two outward, spreading the tripod to its lowest position. Leg angle adjuster will automatically engage the leg to hold the tripod at its lowest height position (Fig. 4).

Fig 4 Lowest height position



Tripod Setup (cont)

Mid Position

Note: This refers to the mid leg angle position, not necessarily the height of the tripod.

The SOLO RAPID LOCK tripod has three leg angle positions. The middle leg angle position (Fig.7) is self-engaging after closing leg from fully spread position (Fig.6). The mid position is chosen for optimum stability in the 50-130cm tripod height range, but is not recommended if the tripod is being used in a crowded situation, due to the wide diameter, or footprint spread, of the extended tripod.



Fig 5 Leg angle adjuster raised



Fig 6 Spread Position



Fig 7 Middle leg angle position



- 1 Remove camera from fluid head.
- 2 Close the tripod legs so all are pointing straight down and disengage all concentric locks.
- 3 Holding the bowl, lower tripod to its shortest length and re-engage concentric locks.
- 4 Close legs together fully (Fig. 1) fit leg strap and return tripod to carry bag if finished shooting.

Shoulder Strap


SOLO's Shoulder Carry Strap can be used looped (both ends attached to the mounting point on the bowl), to carry the tripod on one shoulder,

OR

it can be used attached to the bowl and the Leg Strap "D" ring, to carry the tripod across your back with fluid head towards the ground.

Leg Pivot Adjustment

The leg to bowl pivot joint on the SOLO RAPID LOCK tripod should have no lateral movement and should swing with a firm, smooth resistance. As this is a spreader-less tripod, the leg pivot joint requires sufficient resistance to hold the tripod legs together while being hand carried. Adjustment is usually not required, however, should it become necessary, the following procedure must be observed.

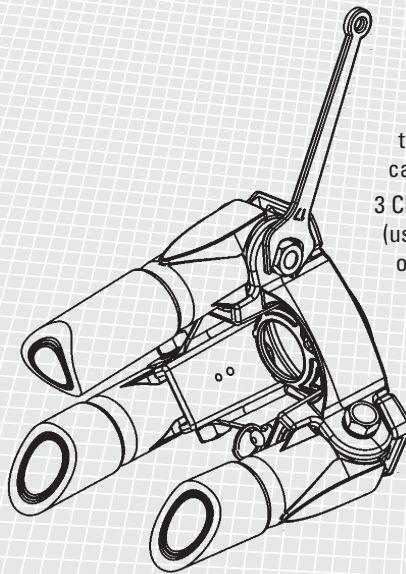

1 Lay tripod on a flat surface with legs closed in transport position.

2 Using 17mm spanner (supplied), gently tighten nut to achieve firm, smooth movement of the leg while still having sufficient tension to hold the legs together when tripod is being hand carried.


3 Check leg resistance by swinging leg fully open (using leg angle adjuster) and ensure that all legs open with a similar degree of effort. Tighten or loosen bolts as necessary.

Important: Remember not to over-tighten as this may cause too much resistance when swinging the legs open.

Leg Strap

The Leg Strap is attached to largest diameter leg tube (as delivered from factory) using 'hook and loop' tape.

The Leg strap also has a "D" ring attachment point for the shoulder strap if required. Check the Leg Strap periodically to ensure hook and loop tape is secure.

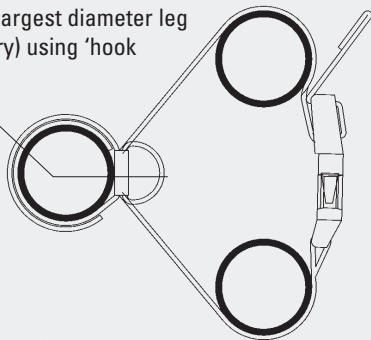

Maintenance

Regularly inspect tripod for damage or grit. Pay particular attention to carbon fibre tubes, concentric locks, leg angle adjusters, condition of bowl, feet and general operation of the tripod.

Keep grit and dirt out of leg angle adjusters. If leg angle adjusters or legs grind or stick during operation they may have grit in contact with their sliding surfaces. The affected parts will require disassembly and cleaning. Failure to do so may result in excessive wear and breakage of tripod components.

Regularly clean tripod with a damp rag or soft brush. Wipe off all sand, dust and salt spray. Do not clean with solvents, cleaning fluids, lubricants, polishes, abrasives or wire brushes.

Transport and store tripod in Miller bag or case wherever possible. Store tripod in a dry place, away from direct sunlight.

Safety

Read the Operator's Manual

Miller recommends that all camera support equipment should be carried in a carry bag to reduce the risk of accidental damage during transport. All Miller SOLO RAPID LOCK systems include a carry bag to protect the tripod and reduce exposure to dust and moisture during transport and storage.

Ensure that the weight of the camera/lens/battery payload mounted on your tripod does not exceed the recommended capacity of the fluid head. This will ensure that the tripod and fluid head you have chosen will operate to their specification. Note that any offset payload, such as a telephoto lens, will exert a forward offset load on the support system. Refer to your fluid head users guide to ensure these loads are properly balanced.

Never set up or pull down a tripod while a camera is mounted on it.

The camera base should be fastened to a suitable camera plate and tripod plate prior to mounting. The camera should be attached to the fluid head only after all tripod leg locks are positively engaged (in locked position) and the tripod is on a stable surface.

The safe operation of the tripod is the responsibility of the operator.

Optional

Cat#	Description		
#394	Solo Dolly	#P6005	17mm Spanner
#1520	Shoulder Strap	#1590	Solo Leg Covers (3)
#872	Softcase (padded)	#1518	Carry Bag
#876	Softcase (padded)	#1521	Transport Strap

Warranty

Please refer to warranty card for complete details

Website

www.millertripods.com

MILLER

Service and Sales Support

Miller Authorised Service Agents must carry out all service and repair work on SOLO RAPID LOCK tripods. Failure to observe this requirement may void warranty. It is advisable to notify Miller or a Miller Authorised Service Agent if a change of performance is observed as a result of impact or rough usage. For information regarding sales and service of Miller products, or for your nearest Miller representative, please contact us via our website or at the following:

MILLER CAMERA SUPPORT (Australia)

30 Hotham Parade, Artarmon, Sydney
NSW 2064 Australia
Tel: +61 2 9439 6377
Fax: +61 2 9438 2819
Email: sales@miller.com.au

MILLER CAMERA SUPPORT LLC (USA)

216 Little Falls Road (Unit 15 & 16),
Cedar Grove,
New Jersey 07009 USA
Tel: (973) 857 8300
Fax: (973) 857 8188
Email: sales@millertripods.us

MILLER FLUID HEADS (Europe) Ltd

Unit 12A, Shepperton Business Park,
Govett Avenue, Shepperton,
Middlesex TW17 8BA, United Kingdom
Tel: +44(0) 1932 222 888
Fax: +44(0) 1932 222 211
Email: sales@millertripods-europe.com