

2-Stage Sprinter II Tripod (CF)

D7417-3

2-Stage Sprinter II Tripod #1576

for #993 Mid Level Spreader.

2-Stage Sprinter II Tripod #1576G

for #470 On Ground Spreader.

Serial No: TM0001 -



SPARE PARTS MANUAL

Miller Camera Support Equipment

ACN 000 923 464

6 Ross Place

Wetherill Park NSW 2164


Sydney, Australia

Tel. +61 2 9439 6377

millertripods.com sales.au@millertripods.com

2-Stage Sprinter II Tripod (CF)

SPARE PARTS MANUAL

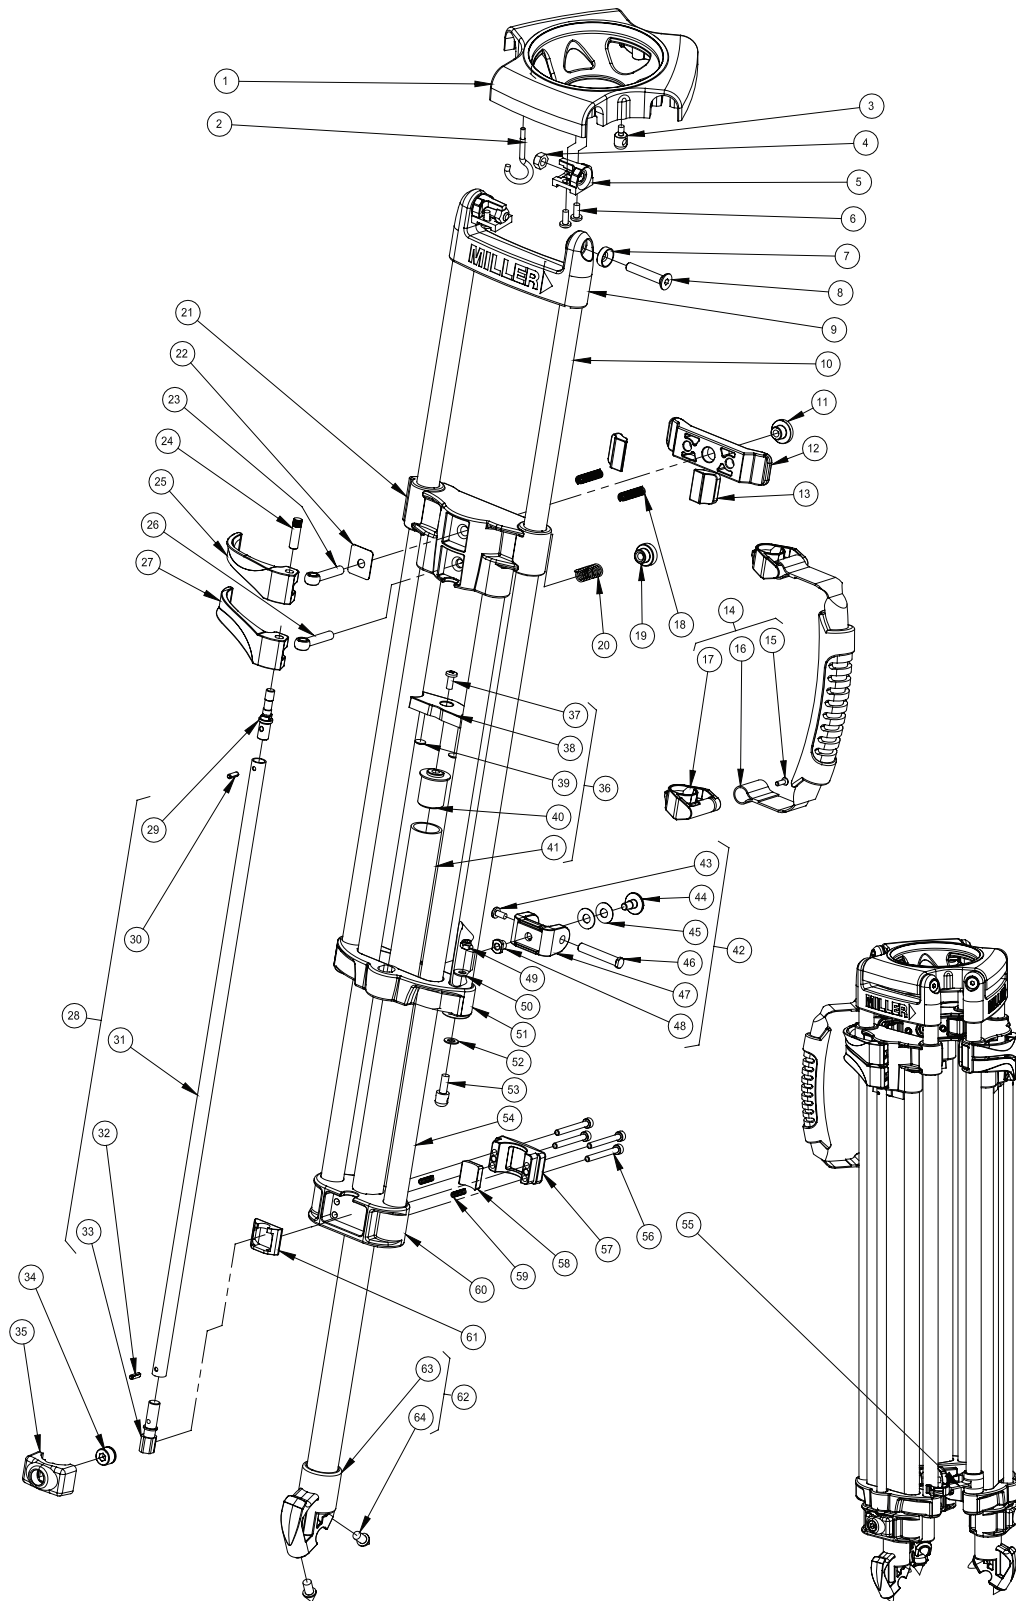

2-Stage Sprinter II Tripod (CF)

Spare Parts List

Item No.	Part No.	Description	Qty/Assy	Note
1	P5272	Ø100 TRIPOD BOWL	1	
2	P2169	M4 HOOK SCREW	1	
3	P5275	M4 x 10 EYELET SCREW	1	
4	P4771	M6 CONE LOCK NUT	6	
5	P5277	LEG TOP INSERT BRACKET	6	
6	P3137	M4 x 10 POZI PAN/HD SCREW	15	
7	P5282	LEG TOP CSK. WASHER	6	
8	P5281	M6 x 35 CSK. SOC. SCREW	6	
9	P5280	LEG TOP BRACKET	3	
10	P5286	Ø16 x 1.75 x 560 TUBE(C/F PWE)	6	
11	P6446	M6 LEG LOCK NUT	3	
12	P6443	UPPER LEG CLAMP PLATE	3	
13	P6441	UPPER LEG LOCK PAD	6	
14	P5380	TRIPOD CARRY HANDLE ASS'Y	1	
15	P3876	M3 x 10 PT CSK. SCREW	2	
16	P5382	TRIPOD CARRY HANDLE	1	
17	P5384	CARRY HANDLE MOUNTING BRACKET	2	
18	P4795	Ø5.8 x 26 x 0.6 COMP. SPRING	6	
19	P5316	M6 LEG LOCK NUT	3	
20	P5322	Ø9.4 x 23 x 1.2 COMP. SPRING	3	
21	P6432	UPPER LEG LOCK BRACKET	3	
22	P5312	BEARING PLATE	3	
23	P4842	LEG LOCK SCREW 33	6	
24	P5313	Ø6 x 22 SERRATED PIN	3	
25	P6434	UPPER LEG LOCK LEVER	3	
26	P4842	LEG LOCK SCREW 33	6	
27	P6436	LOWER LEG LOCK LEVER	3	
28	P5394	Ø10 TUBE ASS'Y (BLK.)	1	
29	P5320	Ø6 LEG LOCK LEVER PIN	3	**
30	P5321	Ø3 x 10 SELLOCK PIN	6	**
31	P5343	Ø10 x 1.2 x 468 TUBE (BLK.)	3	**
32	P5321	Ø3 x 10 SELLOCK PIN	6	**
33	P5390	LOWER LEG LOCK CAM	3	**
34	P6472	M12 LEG LOCK SCREW	3	
35	P6475	LOWER LEG CAM HOUSING	3	
36	P5412	CENTRE LEG ASS'Y (CF BLK.)	1	
37	P3137	M4 x 10 POZI PAN/HD SCREW	15	
38	P5413	CENTRE LEG STOP	3	
39	P5418	Ø7.9 x 2.2 BUMPON	6	
40	P5414	CENTRE LEG STOP PLUG	3	**
41	P5357	Ø22 x 1.75 x 515 TUBE(C/F PWE)	3	**
42	P7407	SPREADER MOUNTING BRACKET ASS'Y	3	***
43	P2153	M4 x 8 POZI PAN/HD SCREW	3	
44	P7401	M5 SPREADER SCREW	3	
45	P3113	Ø15 x 6.20 x 0.50 DISC WASHER	6	
46	P7405	Ø8 x 36 PIN	3	
47	P7399	SPREADER MOUNTING BRACKET	3	
48	P7403	M5 x 7 NUT	3	
49	P2127	M5 NYLOCK NUT	1	
50	P3248	Ø5.2 x Ø14.3 x 0.9 WASHER	1	

SPARE PARTS MANUAL



2-Stage Sprinter II Tripod (CF)

Spare Parts List				
Item No.	Part No.	Description	Qty/Assy	Note
51	P7397	LEG BOTTOM BRACKET	3	
52	P2124	M5 x 10 x 0.8 WASHER	1	
53	P3247	M5 x 11 EYELET SCREW	1	
54	P5334	Ø16 x 1.75 x 515 TUBE(C/F PWE)	6	
55	P5330	TRANSPORT CLIP	2	
56	P5348	M4 x 35 SOC. CAP SCREW	12	
57	P6477	LOWER LEG CLAMP BRACKET	3	
58	P6450	LOWER LEG LOCK PAD	3	
59	P4838	Ø3.8 x 15 x 0.45 COMP. SPRING	6	
60	P5344	LOWER LEG LOCK BRACKET	3	
61	P6479	LOWER LEG LOCK SADDLE	3	
62	P5375	LOWER LEG FOOT ASS'Y	1	
63	P5374	LOWER LEG FOOT	3	**
64	P2185	LEG TIP	6	**
	**	This part not sold seperately		
	***	For #1580 (to suit #993 Mid-Level Spreader)		
	QTY/ASSY	Total quantity for complete assembly		

SPARE PARTS MANUAL



Quality
ISO 9001
SAI GLOBAL



THE RIGHT FEEL

MILLER Camera Support Equipment

6 Ross Place
Wetherill Park NSW 2164
Sydney Australia
P +61 2 9439 6377
sales.au@millertripods.com

MILLER Camera Support (LLC) USA

216 Little Falls Road (Unit 2)
Cedar Grove New Jersey 07009 USA
P +1 (973) 857 8300
F +1 (973) 857 8188
sales.us@millertripods.com

MILLER FLUID HEADS (EUROPE) LTD.

12A, Shepperton Business Park
Govett Avenue Shepperton
Middlesex, TW17 8BA
United Kingdom
P +44 (0) 1932 222 888
F +44 (0) 1932 222 211
sales.eu@millertripods.com

millertripods.com