



SPARE PARTS MANUAL

D7423-1

1-Stage Sprinter II Tripod #1589

for #993 Mid-Level Spreader.

1-Stage Sprinter II Tripod #1589G

for #470 On-Ground Spreader.

Serial No.: TM0001 – TM4816




July
2008

Miller Camera Support Equipment
A.C.N. 000 923 464
30 Hotham Parade
Artarmon NSW 2064
Australia

Tel: (61-2) 9439 6377
Fax: (61-2) 9438 2819
Web Site: www.millertripods.com
Email: sales@miller.com.au

Camera **Support**

1-Stage Tripod – Spare Parts Drawing.

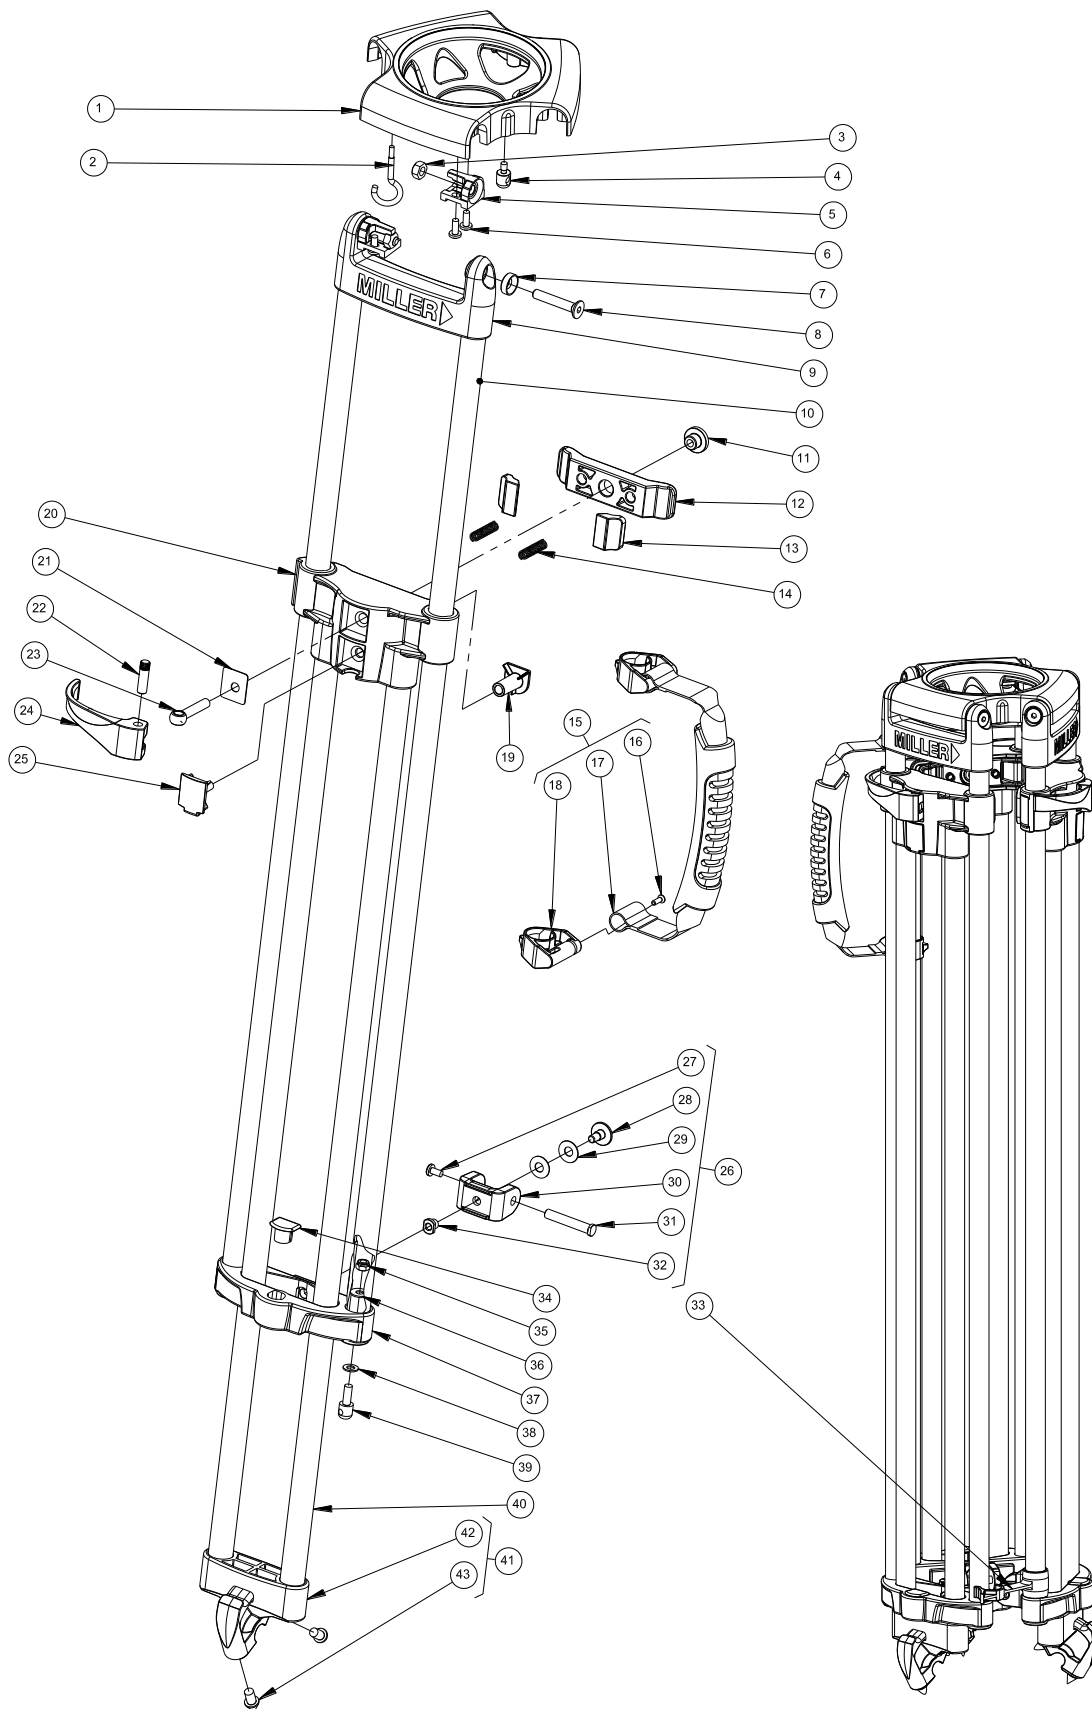

1-Stage Tripod – Spare Parts List.

ITEM No.	PART No.	DESCRIPTION	QTY / ASSY	PRICE EACH
1	P5272	Ø100 TRIPOD BOWL	1	
2	P2169	M4 HOOK SCREW	1	
3	P4771	M6 CONE LOCK NUT	6	
4	P5275	M4 x 7 EYELET SCREW	1	
5	P5277	LEG TOP INSERT BRACKET	6	
6	P3137	M4 x 10 POZI PAN/HD SCREW	12	
7	P5282	LEG TOP CSK. WASHER	6	
8	P5281	M6 x 35 CSK. SOC. SCREW	6	
9	P5280	LEG TOP BRACKET	3	
10	P5291	Ø16 x 1.60 x 740 TUBE	6	
11	P6446	M6 LEG LOCK NUT	3	
12	P6443	UPPER LEG CLAMP PLATE	3	
13	P6441	UPPER LEG LOCK PAD	6	
14	P4795	Ø5.8 x 26 x 0.6 COMP. SPRING	6	
15	P5380	TRIPOD CARRY HANDLE ASS'Y	1	
16	P3876	M3 x 10 PT CSK. SCREW	2	
17	P5382	TRIPOD CARRY HANDLE	1	
18	P5384	CARRY HANDLE MOUNTING BRACKET	2	
19	P5298	UPPER LEG COVER (REAR)	3	
20	P6432	UPPER LEG LOCK BRACKET	3	
21	P5312	BEARING PLATE	3	
22	P5313	Ø6 x 22 SERRATED PIN	3	
23	P4842	LEG LOCK SCREW 33	3	
24	P6434	UPPER LEG LOCK LEVER	3	
25	P5297	UPPER LEG COVER (FRONT)	3	
26	P7407	SPREADER MOUNTING BRACKET ASS'Y	3	
27	P2153	M4 x 8 POZI PAN/HD SCREW	3	
28	P7401	M5 SPREADER SCREW	3	
29	P3113	Ø15 x 6.20 x 0.50 DISC WASHER	6	
30	P7399	SPREADER MOUNTING BRACKET	3	
31	P7405	Ø8 x 36 PIN	3	
32	P7403	M5 x 7 NUT	3	
33	P5330	TRANSPORT CLIP	2	
34	P5325	LEG BOTTOM BRACKET PLUG	3	
35	P2127	M5 NYLOCK NUT	1	
36	P3248	Ø5.2 x 14.3 x 0.9 WASHER	1	
37	P7396	LEG BOTTOM BRACKET	3	
38	P2124	M5 x 10 x 0.8 WASHER	1	
39	P3247	M5 x 11 EYELET SCREW	1	
40	P5339	Ø16 x 1.60 x 690 TUBE	6	
41	P5370	UPPER LEG FOOT ASS'Y	3	
42	P5371	UPPER LEG FOOT	3	See Note
43	P2185	LEG TIP	6	See Note

Note: This part not sold separately.

26 P7407 SPREADER MOUNTING BRACKET ASS'Y. for #1589 (to suit #993 Mid-Level Spreader).

'QTY/ASSY' = Total quantity for complete assembly.



SALES, SERVICE AND SUPPORT.

This is authorised document designed and produced by Miller Camera Support Equipment.

The information contained in this document is correct at the time of publication. Miller accepts no responsibility for any possible errors that may affect information herein and reserves the right to make changes without notice to the information contained within this document.

Use only Miller Authorised Service Agents for all service and repair work. Failure to observe this requirement may void warranty. It is advisable to notify. For information regarding sales and service of Miller products or for your nearest Miller representative please contact us via our website or at the following:

MILLER CAMERA SUPPORT EQUIPMENT

30 Hotham Parade, Artarmon, Sydney,

NSW 2064 Australia

Tel: +61 2 9439 6377

Fax: +61 2 9438 2819

Email: sales@miller.com.au

MILLER CAMERA SUPPORT (LLC) USA

218 Little Falls Road, Cedar Grove,

New Jersey 07009-1231 USA

Tel: (973) 857 8300

Fax: (973) 857 8188

Email: sales@millertripods.us

MILLER FLUID HEADS (EUROPE) LTD.

Unit A2, Ford Lane Industrial Estate

Ford Lane, Ford

West Sussex BN18 0DF,

United Kingdom

Tel: +44 (0)1243 555255 Fax: +44 (0)1243 555 001

Email: sales@millertripods-europe.com

www.millertripods.com